



FC-6 series fibre cleavers

FC-6 series

- A practical tool with easy handling
- C version with safe off-cut collector
- Field replaceable blade
- Large bin is simple to remove & clean




Specification

	FC-6S	FC-6S-C	FC-6M-C
FIBRE TYPES	125um SMF, MMF and others		
FIBRE NUMBER	1	1	1 to 12
FIBRE RIBBON	No	No	Yes
CLEAVE LENGTH 250um	9 to 16mm when using AP-FC6M		10mm with fibre holder
CLEAVE LENGTH 900um	10 to 16mm when using AP-FC6M		10mm with fibre holder
USE FIBRE HOLDER	Yes	Yes	Yes
CU-FC6 INCLUDED	Optional extra	Yes	Yes
AP-FC6M INCLUDED	Yes	Yes	Optional extra
DIMENSIONS	63(w) x 76(d) x 63(h)mm	100(w) x 81(d) x 63(h)mm including CU-FC6	
WEIGHT	384g	425g including CU-FC6	
BLADE LIFE	36000 cleaves by using 12 edge positions each separated by 30° Rotation of the blade is not limited to preset positions. It can be freely rotated to any edge position. Therefore more than 36000 cleaves may be achieved if the blade is rotated by <30° between edge positions.		



CU-FC6 offcut collector

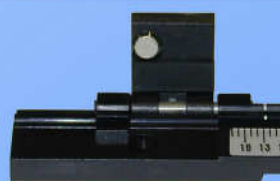

AP-FC6M single fibre adaptor



FCP20-BL cleaver blade